



Series 5 Inverter

NEMA 4X, IP-65

Installation and Operating Manual

TABLE OF CONTENTS

Section	Page
1 Quick-Start Instructions	4
2 Safety Warning	5
3 Introduction	6
4 Important Application Information	12
5 Wiring Instructions	13
6 Setting Selectable Jumpers	16
7 Mounting Instructions	19
8 Recommended High Voltage Dielectric Withstand Testing (Hi-Pot Testing)	19
9 Drive Operation	21
10 AC Line Fusing	21
11 Diagnostic LEDs	21
12 Trimpot Adjustments	22
Appendix	26
Baldor District Offices	27
Limited Warranty	28

Tables	Page
1 Jumper Selectable Features	8
2 Optional Accessories	8
3 General Performance Specifications	10
4 Electrical Ratings	10
5 Terminal Block Wiring Information	13
6 Drive Operating Condition and Run/Fault Relay Contact Status	16
7 Drive Operating Condition and Status LED Indicator	22

Figures	Page
1 Quick-Start Connection Diagram	4
2 Control Layout	9
3 Catalog No. ID5601 Mechanical Specifications	11
4 Catalog Nos. ID5602, ID5203, ID5403, ID5405 Mechanical Specifications	11
5 Maximum Allowed Motor Torque vs. Speed	12
6 Open Ventilated Motor with External Fan Cooling	12
7 Catalog Nos. ID5601, ID5602 AC Line Input, Motor, and Ground Connections	13
8 Catalog Nos. ID5203, ID5403, ID5405 AC Line Input, Motor, and Ground Connections	14
9 Remote Main Speed Potentiometer Connection	14
10 Remote Start/Stop Switch Connection with Normally Open Stop Contact	15
11 Remote Start/Stop Switch Connection with Normally Closed Stop Contact	15
12 Start/Stop Function Eliminated	15
13 Voltage Following Connections	15
14 Enable Circuit Connection	16
15 Run/Fault Relay Output Contacts Connection	16
16 Catalog Nos. ID5601, ID5602 AC Line Input Voltage Selection (Jumper J1)	16
17 Removing Jumper J1 on Catalog Nos. ID5601, ID5602	17
18 Motor Horsepower Selection (Jumper J2)	17
19 Automatic Ride-Through or Manual Restart Selection (Jumper J3)	17
20 60 Hz and 50 Hz Motor Selection (Jumpers J4 and J5)	17
21 Available Torque vs. Output Frequency	18
22 120 Hz and 100 Hz Drive Output Frequency Selection	18
23 Fixed or Adjustable Boost Selection (Jumper J6)	18
24 Regenerative or DC Injection Braking Selection (Jumper J7)	18
25 "Run" or "Fault" Output Relay Operation Selection (Jumper J8)	19
26 Normally Open or Closed Stop Contact Selection (Jumper J9)	19
27 Constant or Variable Torque Selection (Jumper J10)	19

28 I²t Overload Selection (Jumper J11) 19

29 Typical Hi-Pot Test Setup 20

30 Minimum Speed Trimpot (MIN) Range 22

31 Maximum Speed Trimpot (MAX) Range 22

32 Acceleration Trimpot (ACCEL) Range 22

33 Deceleration Trimpot (DECEL) Range 23

34 DC Injection Brake Trimpot (DECEL) Range 23

35 Slip Compensation Trimpot (COMP) Range 23

36 Current Limit Trimpot (CL) Range 23

37 I²t Trip Time vs. Motor Current 24

38 Boost Trimpot (BOOST) Range 25

39 Run-Stop-Jog Switch Connection 25

40 Jog Trimpot (JOG) Range 25

Items Included In this Package:

Adjustable Frequency Drive, Installation and Operation Manual, Trimpot Adjustment Tool, CE Approved Product Information Card, Warranty Registration Card.

Catalog No.	
Black	White*
ID5601-B0	ID5601-W0
ID5602-B0	ID5602-W0
ID5203-B0	ID5203-W0
ID5403-B0	ID5403-W0
ID5405-B0	ID5405-W0

**White FDA approved finish.*

1 QUICK-START INSTRUCTIONS


Important – You must read these simplified instructions before proceeding. These instructions are to be used as a reference only and are not intended to replace the details provided herein. You must read the Safety Warning on, page 5, before proceeding.

See Figure 1. Also see Section 4 - Important Application Information, on page 12.



WARNING! Disconnect main power before making connections to the drive.

FIGURE 1 – QUICK-START CONNECTION DIAGRAM*

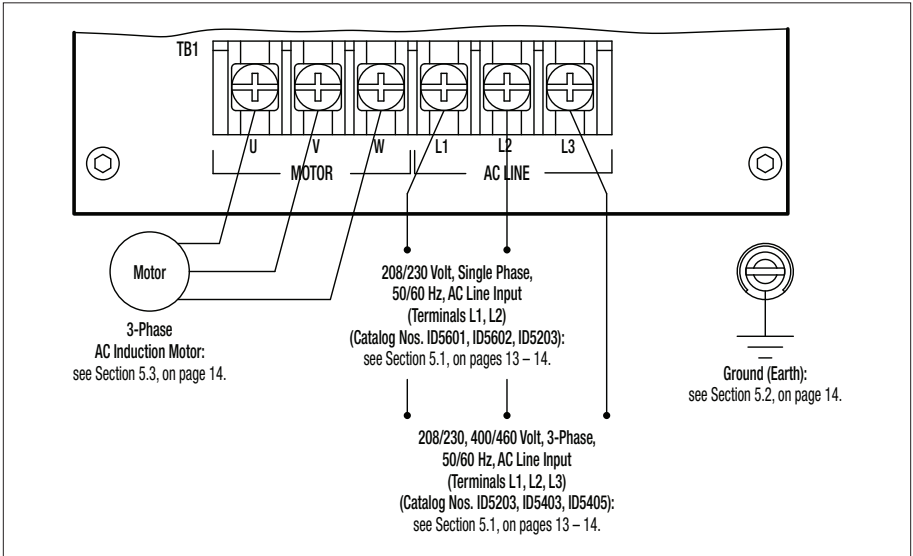

*Layout of Catalog No. ID5601 varies slightly.

- 1.1 AC LINE INPUT CONNECTION** – Wire the AC line input to Terminal Block TB1. See Section 5.1, on pages 13 – 14.

Application Note: Do not wire this drive to a GFCI. If operation with a GFCI is required, contact your local Baldor District Office.

Note: The rated AC line voltage of the drive must match the actual AC line input voltage. On Catalog Nos. ID5601, ID5602, the setting of Jumper J1 must match the AC line input voltage.

Catalog Nos. ID5601, ID5602: Designed to accept single-phase (Terminals “L1”, “L2”) AC line input only. Rated for 208/230 Volt AC line input with Jumper J1 set to the “230V” position (factory setting). Rated for 115 Volt AC line input with Jumper J1 set to the “115V” position. See Figure 7, on page 13.

Note: Catalog No. ID5602 is rated for 1½ HP maximum with 115 Volt AC line input and 2 HP maximum with 208/230 Volt AC line input.

Catalog No. ID5203: Designed to accept single-phase (Terminals “L1”, “L2”) or 3-phase (Terminals “L1”, “L2”, “L3”) AC line input. Rated for 208/230 Volt AC line input only. See Figure 8, on page 14.

Note: Rated for 2 HP maximum with single-phase AC line input and 3 HP maximum with 3-phase AC line input.

Catalog Nos. ID5403, ID5405: Designed to accept 3-phase (Terminals "L1", "L2", "L3") AC line input only. Rated for 400/460 Volt AC line input only. See Figure 8, on page 14.

- 1.2 AC LINE FUSING** – It is recommended that a fuse(s) or circuit breaker be installed in the AC line. Fuse each conductor that is not at ground potential. For the recommended fuse size, see Table 4, on page 10. Also see Section 10, on page 21.
- 1.3 GROUND CONNECTION** – Connect the ground wire (earth) to the ground screw, as shown in Figure 7, on page 13, and Figure 8, on page 14. See Section 5.2, on page 14.
- 1.4 MOTOR CONNECTION** – Wire the motor to Terminal Block TB1 Terminals "U", "V", "W", as shown in Figure 7, on page 13, and Figure 8, on page 14. (Special reactors may be required for cable lengths over 100 ft. (30 m) – contact your local Baldor District Office.) See Section 5.3, on page 14.
- 1.5 60 Hz and 50 Hz MOTOR OPERATION** – The drive is factory set for 60 Hz 3-phase motor operation (Jumper J5 set to the "60Hz" position). For 50 Hz motor operation, set Jumper J5 to the "50Hz" position. See Section 6.4, on page 17.
- 1.6 ON/OFF AC LINE SWITCH** – The drive is supplied with a prewired On/Off AC Line Switch to disconnect the AC line. See Appendix, on page 26.
- 1.7 START/STOP SWITCH** – The drive is supplied with a prewired Start/Stop Switch to electronically "start" and "stop" the drive, as described in Section 5.5, on pages 14 – 15. This switch must be used to "start" the drive each time the AC line is applied to the drive or to "restart" the drive. Also see Section 6.8, on page 18.
- 1.8 JUMPER SETTINGS** – All jumpers have been factory set for most applications, as shown in Figure 2, on page 9. Some applications require setting of the jumpers in order to tailor the drive for a specific requirement. See Section 6, on pages 16 – 18.
- 1.9 TRIMPOT SETTINGS** – All trimpots have been factory set for most applications, as shown in Figure 2, on page 9. Some applications require adjustment of the trimpots in order to tailor the drive for a specific requirement. See Section 12, on pages 22 – 25.
- 1.10 DIAGNOSTIC LEDs** – After power has been applied, observe the LEDs to verify proper drive operation, as described in Section 11, on pages 21 – 22.

2 SAFETY WARNING

Definition of Safety Warning Symbols



Electrical Hazard Warning Symbol – Failure to observe this warning could result in electrical shock or electrocution.



Operational Hazard Warning Symbol – Failure to observe this warning could result in serious injury or death.



This product should be installed and serviced by a qualified technician, electrician, or electrical maintenance person familiar with its operation and the hazards involved. Proper installation, which includes wiring, fusing or other current protection, and grounding can reduce the chance of electrical shocks, and/or fires, in this product or products used with this product, such as electric motors, switches, coils, solenoids, and/or relays. Do not use this drive in an explosion-proof application. Eye protection must be worn and insulated adjustment tools must be used when working with drive under power. This product is constructed of materials (plastics, metals, carbon, silicon, etc.) which may be a potential hazard. Proper shielding, grounding, and filtering of this product can reduce the emission of radio frequency interference (RFI) which may adversely affect sensitive electronic equipment. It is the responsibility of the equipment manufacturer and individual installer to supply this Safety Warning to the ultimate end user of this product. Be sure to follow all instructions carefully. Fire and/or electrocution can result due to improper use of this product. (SW 1/2006)



This product complies with all CE directives pertinent at the time of manufacture. Contact your local Baldor District Office for Declaration of Conformity. Installation of a CE approved RFI filter is required. Additional shielded cable and/or AC line cables may be required along with a signal isolator.

3 INTRODUCTION

The Baldor Series 5 Inverters are variable speed controls housed in a rugged NEMA-4X / IP-65 washdown and watertight die-cast aluminum enclosure. They are designed to operate 208 – 230 and 400/460 Volt 50 & 60 Hz 3-phase AC induction motors from subfractional thru 5 HP. The sine wave coded Pulse Width Modulated (PWM) output operates at a carrier frequency of 16 kHz which provides high motor efficiency and low noise. Adjustable Linear Acceleration and Deceleration are provided, making the drive suitable for soft-start applications.

Due to its user-friendly design, the drive is easy to install and operate. Tailoring to specific applications is accomplished with selectable jumpers and trimpots, which eliminate the computer-like programming required on other drives. However, for most applications no adjustments are necessary.

Main features include adjustable RMS Current Limit and I²t Motor Overload Protection.* In addition, Adjustable Slip Compensation with Static Auto-Tune and Boost provides high torque and excellent load regulation over a wide speed range. Power Start™ delivers over 200% motor torque to ensure start-up of high frictional loads. Electronic Inrush Current Limit (EICL™) eliminates harmful AC line inrush current. A Run/Fault Relay is provided, which can be used to turn on or off equipment or to signal a warning if the drive is put into the Stop Mode or if a fault has occurred. The drive is suitable for machine or variable torque (HVAC) applications. Also, a jumper is provided for selection of Regenerative or DC Injection Braking.

Standard front panel features include Diagnostic LEDs for "Power On" and "Drive Status", an On/Off AC Line Switch, a Start/Stop Switch, and a Main Speed Potentiometer. Other features include a Barrier Terminal Block to facilitate wiring of the AC line and motor, adjustable trimpots (MIN, MAX, ACCEL, DECEL, COMP, CL, JOG, BOOST), customer selectable jumpers (Line Voltage (dual voltage models only), Motor Horsepower, Automatic Ride-Through / Manual Start, Motor Frequency, Frequency Multiplier, Fixed/Adjustable Boost, Regenerative / Injection Braking, "Run" or "Fault" Output Relay Operation, NO/NC Stop Contact, Constant/Variable Torque, I²t Overload Selection).

Optional accessories include: Forward-Stop-Reverse Switch, Signal Isolator, Auto/Manual Switch, and Class "A" AC Line Filter. A connector is provided for easy installation of accessories. Custom software: all models can be factory programmed for applications which require special timing, PLC functions, and GFCI operation – contact your local Baldor District Office.

**UL approved as an electronic overload protector for motors.*

3.1 STANDARD FEATURES

- **Industrial Duty Die-Cast Aluminum Case with Hinged Cover** – Available in black finish or FDA approved white finish.
- **Simple to Operate** – Does not require programming. Uses trimpots and jumpers, which are factory set for most applications.
- **Motor HP Selection Jumper** – Allows the drive to be used on a wide range of motors without recalibration.
- **Diagnostic LEDs** – Power on (POWER) and drive status (STATUS).
- **Run/Fault Relay Output Contacts** – Can be used to turn on or off equipment or to signal a warning if the drive is put into the Stop Mode or a fault has occurred.
- **On/Off AC Line Switch** – Disconnects the AC line.
- **Start/Stop Switch** – Provides electronic start and stop functions.
- **Barrier Terminal Block** – Facilitates wiring of motor, AC line, and Run/Fault Relay Output Contacts.

- **Jumper Selection of Drive Output Frequency** – Increases the motor speed up to two times the rated RPM.
- **Ride-Through** – Provides smooth recovery to the previous set speed during a momentary power loss (of less than 2 seconds).
- **Holding Torque at Zero Speed** – Resists motor shaft rotation when the drive is in Stop Mode.

3.2 PERFORMANCE FEATURES

- **Power Start™** – Provides more than 200% starting torque which ensures startup of high frictional loads.
- **Slip Compensation with Static Auto-Tune and Boost** – Provides excellent load regulation over a wide speed range.
- **Speed Range** – 60:1

3.3 PROTECTION FEATURES

- **Motor Overload (I^2t) with RMS Current Limit*** – Provides motor overload protection which prevents motor burnout and eliminates nuisance trips.*
- **Electronic Inrush Current Limit (EICL™)** – Eliminates harmful Inrush AC line current during startup.
- **Short Circuit** – Shuts down the drive if a short circuit occurs at the motor (phase-to-phase).
- **Regeneration** – Eliminates tripping due to high bus voltage caused by rapid deceleration of high inertial loads.
- **Undervoltage and Overvoltage** – Shuts down the drive if the AC line input voltage goes above or below the operating range.
- **MOV Input Transient Suppression.**
- **Microcontroller Self Monitoring and Auto Reboot.**

**UL approved as an electronic overload protector for motors.*

3.4 TRIMPOT ADJUSTMENTS

- **Minimum Speed (MIN)** – Sets the minimum speed of the motor. See Section 12.1, on page 22.
- **Maximum Speed (MAX)** – Sets the maximum speed of the motor. See Section 12.2, on page 22.
- **Acceleration (ACCEL)** – Sets the amount of time for the motor to accelerate from zero speed to full speed. See Section 12.3, on page 22.
- **Deceleration (DECEL)** – Sets the amount of time for the motor to decelerate from full speed to zero speed. See Section 12.4, on page 23.
- **DC Injection Brake (DECEL)** – When the drive is set for DC Injection Braking (Jumper J7 set to the "INJ" position), the DECEL trimpot is used to set the DC Injection Brake voltage and time. See Section 12.5, on page 23.
- **Slip Compensation (COMP)** – Maintains set motor speed under varying loads. See Section 12.6, on page 23.
- **Current Limit (CL)** – Sets the current limit (overload) which limits the maximum current to the motor. See Section 12.7, on page 24.
- **Boost (BOOST)** – Sets the amount of Boost which can be used to obtain maximum low speed performance. See Section 12.8, on pages 24 – 25.
- **Jog (JOG)** – Sets the "jog" speed of the motor. Must be used with an optional Run-Stop-Jog Switch. See Section 12.9, on page 25.

TABLE 1 – JUMPER SELECTABLE FEATURES

Description ¹	PC Board Designation	Catalog No. ID5601	Catalog No. ID5602	Catalog No. ID5203	Catalog No. ID5403	Catalog No. ID5405
AC Line Input Voltage (115, 230)	J1	✓	✓	—	—	—
Motor Horsepower (see Table 4 - Electrical Ratings, on page 10)	J2	✓	✓	✓	✓	✓
Automatic Ride-Through or Manual Restart (A* , M)	J3	✓	✓	✓	✓	✓
Frequency Multiplier (1X , 2X)	J4	✓	✓	✓	✓	✓
Motor Frequency (50Hz, 60Hz)	J5	✓	✓	✓	✓	✓
Fixed or Adjustable Boost (FIX , ADJ)	J6	✓	✓	✓	✓	✓
Regenerative or DC Injection Braking (RG , INJ)	J7	✓	✓	✓	✓	✓
"Run" or "Fault" Output Relay Operation (R , F)	J8	✓	✓	✓	✓	✓
Normally Open or Closed Stop Contact (NO , NC)	J9	✓	✓	✓	✓	✓
Constant or Variable Torque (VT, CT)	J10	✓	✓	✓	✓	✓
I ² t Overload Selection (1 , 2)	J11	✓	✓	✓	✓	✓

Notes: **1.** Bold indicates factory setting. **2.** In Automatic Ride-Through Mode, the drive will automatically restart due to a momentary power loss of less than 2 seconds.

TABLE 2 – OPTIONAL ACCESSORIES


Description	Catalog No. ID5601	Catalog No. ID5602	Catalog No. ID5203	Catalog No. ID5403	Catalog No. ID5405
Forward-Stop-Reverse Switch – Provides motor reversing and stop functions. Mounts on the enclosure cover and is supplied with a switch seal to maintain liquidtight integrity.	ID5FRS-1	ID5FRS-1	ID5FRS-1	ID5FRS-1	ID5FRS-1
Signal Isolator – Provides isolation between a non-isolated signal voltage source and the drive. Mounts on the drive's PC board with four snap-ins.	ID5SI-2*	ID5SI-2*	ID5SI-2*	ID5SI-2*	ID5SI-2*
Auto/Manual Switch – When used with the Signal Isolator, it selects remote process signal or the Main Speed Potentiometer. Mounts on the enclosure cover and is supplied with a switch seal to maintain liquidtight integrity.	ID5AMS-1	ID5AMS-1	ID5AMS-1	ID5AMS-1	ID5AMS-1

Notes: Complies with CE Council Directive 39/336/EEC Industrial Standard.



*** Warning!** It is highly recommended that the ID5SI-2 Signal Isolator be installed when using the drive with external control signals.

FIGURE 2 – CONTROL LAYOUT¹

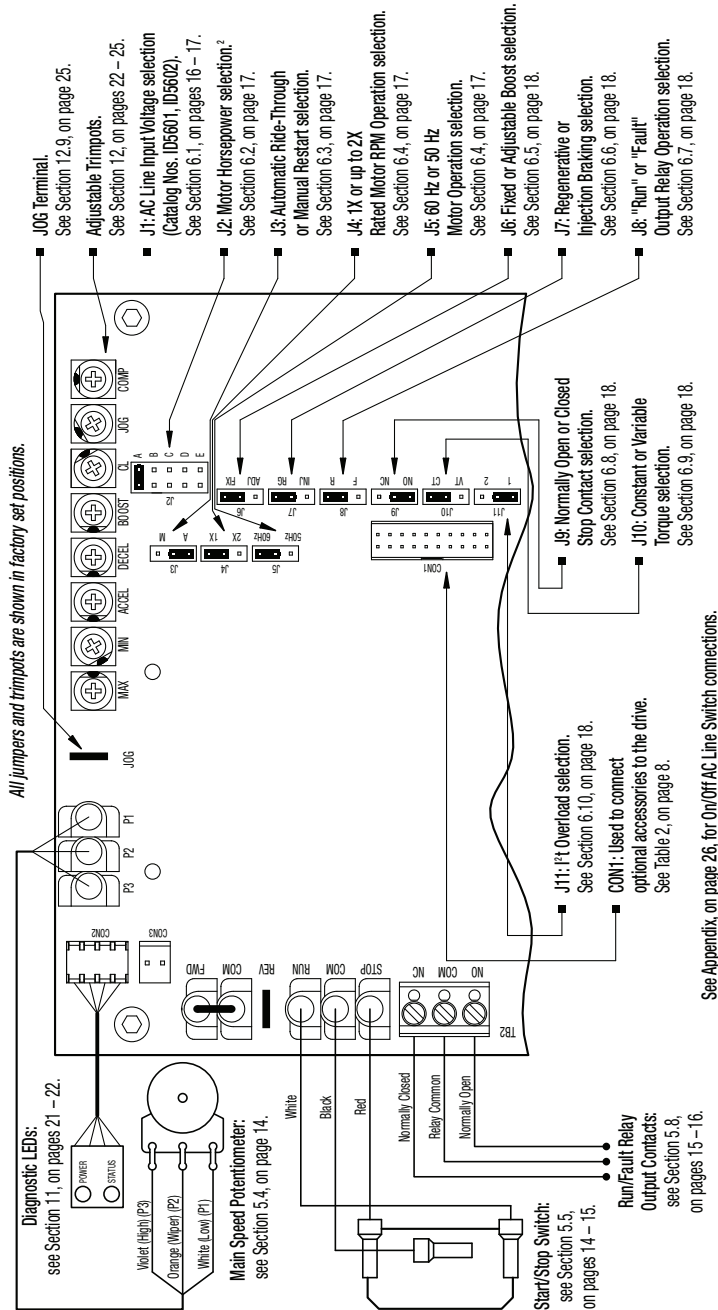

Notes: 1. Layout of Catalog No. ID5601 varies slightly. 2. Jumper J2 on Catalog No. ID5601 is labeled "1", "3/4", "1/2", "1/8" (factory set to the "1" position). Jumper J2 on Catalog No. ID5602 is labeled "2", "1/2", "1", "3/4", "1/2" (factory set to the "1/2" position). Jumper J2 on Catalog Nos. ID5203, ID5403, ID5405 is labeled "A", "B", "C", "D", "E" (factory set according to table 4, on page 10).

TABLE 3 – GENERAL PERFORMANCE SPECIFICATIONS

Description	Specification	Factory Setting
115 Volt AC Line Input Voltage Operating Range (Volts AC)	115 (±15%)	—
208/230 Volt AC Line Input Voltage Operating Range (Volts AC)	208 (-15%) / 230 (+15%)	—
400/460 Volt AC Line Input Voltage Operating Range (Volts AC)	380 (-15%) – 460 (+15%)	—
Maximum Load (% Current Overload for 2 Minutes)	150	—
Carrier, Switching Frequency (kHz)	16, 8	—
Signal Following Input Voltage Range ¹ (Volts DC)	0 – 5	—
Output Frequency Resolution (Bits, Hz)	10, .06	—
Minimum Speed Trimptot (MIN) Range (% Frequency Setting)	0 – 40	0
Maximum Speed Trimptot (MAX) Range (% Frequency Setting)	70 – 110	100
Acceleration Trimptot (ACCEL) and Deceleration Trimptot (DECEL) Range (Seconds)	.3 – 20	1.5
Boost Trimptot (BOOST) Range (Volts/Hz)	0 – 30	5
Slip Compensation Trimptot (COMP) Range at Drive Rating (Volts/Hz)	0 – 3	1.5
Current Limit Trimptot (CL) Range (% Full Load)	40 – 200	160
Jog Trimptot (JOG) Range (% Frequency Setting)	0 – 100	35
Motor Frequency Setting (Hz) (Jumper J5)	50, 60	60
Output Frequency Multiplier (1X, 2X) (Jumper J4) ²	1, 2	1
Minimum Operating Frequency at Motor (Hz)	1	—
Speed Range (Ratio)	60:1	—
Speed Regulation (30:1 Speed Range, 0 – Full Load) (% Base Speed) ³	2.5	—
Overload Protector Trip Time for Stalled Motor (Seconds)	6	—
Undervoltage/Overvoltage Trip Points for 115 Volt AC Line Input (± 5%) (Volts AC) ⁴	76 – 141	—
Undervoltage/Overvoltage Trip Points for 208/230 Volt AC Line Input (± 5%) (Volts AC) ⁴	151 – 282	—
Undervoltage/Overvoltage Trip Points for 400/460 Volt AC Line Input (± 5%) (Volts AC) ⁴	302 – 567	—
Run/Fault Relay Output Contact Rating (Amps at 30 Volts DC, 125 Volts AC, 250 Volts AC)	1, 0.5, 0.25	—
Operating Temperature Range (°C / °F)	0 – 45 / 32 – 113	—


Notes: 1. Requires an isolated signal. If a non-isolated signal is used, or if using 0 to ±2.5 thru 0 to ±25 Volts DC, or 4 – 20 mA DC signal input, install the ID5SI-2 Signal Isolator. 2. Allows the motor to operate up to two times the rated RPM. Constant horsepower will result when operating the drive in the "X2" mode above the motor rated frequency. 3. Dependent on motor performance. 4. Do not operate the drive outside the specified AC line input voltage operating range.

TABLE 4 – ELECTRICAL RATINGS

Catalog No.		AC Line Input			Fuse or Circuit Breaker Rating (Amps)	Drive Output			Motor Horsepower Selection ² (Jumper J2)					Net Wt.	
		Volts AC (50/60 Hz)	Phase (φ)	Maximum Current (Amps AC)		Voltage Range (Nominal) (Volts AC)	Maximum Continuous Load Current (RMS Amps/Phase)	Maximum Horsepower (HP (kW))							
Black	White ¹													lbs	kg
ID5601-B0	ID5601-W0	115	1	16	20	0 – 230	3.6	1 (.75)	1	3/4	1/2	1/4	1/8	5.9	2.7
		208/230	1	10	15	0 – 230									
ID5602-B0	ID5602-W0	115	1	22	25	0 – 230	5.5	1½ (1.13)	—	1½ ⁴	1	3/4	1/2	10.3	4.7
		208/230	1	15	20	0 – 230	6.7	2 (1.5)	2 ⁴						
									A	B	C	D	E		
ID5203-B0	ID5203-W0	208/230	1	15	20	0 – 230	6.7	2 (1.5)	—	2 ⁵	1½	1	3/4	10.3	4.7
			3	10.8	15	0 – 230	9.0	3 (2.25)	3 ⁵						
ID5403-B0 ³	ID5403-W0 ³	400/600	3	5.3	10	0 – 400/460	4.6	3 (2.25)	3	2	1½	1	3/4	10.3	4.7
ID5405-B0 ³	ID5405-W0 ³	400/600	3	9.6	10	0 – 400/460	8.3	5 (3.75)	5	3	2	1½	1	10.3	4.7

Notes: 1. White FDA approved finish. 2. Bold indicates factory setting. Jumper J2 on Catalog No. ID5601 is labeled "1", "3/4", "1/2", "1/4", "1/8" (factory set to the "1" position). Jumper J2 on Catalog No. ID5602 is labeled "2", "1½", "1", "3/4", "1/2" (factory set to the "1½" position). Jumper J2 on Catalog Nos. ID5203, ID5403, ID5405 is labeled "A", "B", "C", "D", "E" (factory set according to the table). 3. Catalog Nos. ID5403, ID5405 are rated 0 – 400 Volts AC for 50 Hz motor operation and 0 – 460 Volts AC for 60 Hz motor operation. 4. Catalog No. ID5602 is rated 1½ HP maximum with 115 Volt AC line input and 2 HP maximum with 208/230 Volt AC line input. 5. Catalog No. ID5203 is rated 2 HP maximum with single-phase AC line input and 3 HP maximum with 3-phase AC line input.


FIGURE 3 – CATALOG NO. ID5601 MECHANICAL SPECIFICATIONS (INCHES/MM)

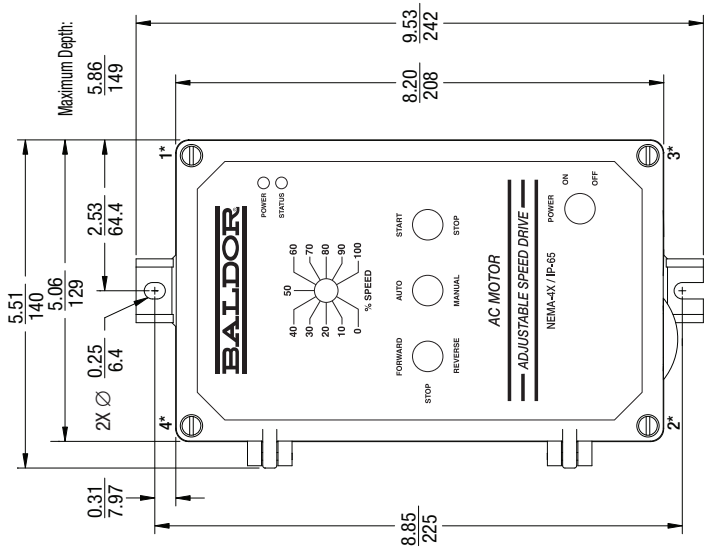

Contains 2 mounting holes for standard 1/2" liquidtight fittings

* Tighten these screws, in the sequence shown, to 12 in-lbs (14 kg-cm).

FIGURE 4 – CATALOG NOS. ID5602, ID5203, ID5403, ID5405 MECHANICAL SPECIFICATIONS (INCHES/MM)

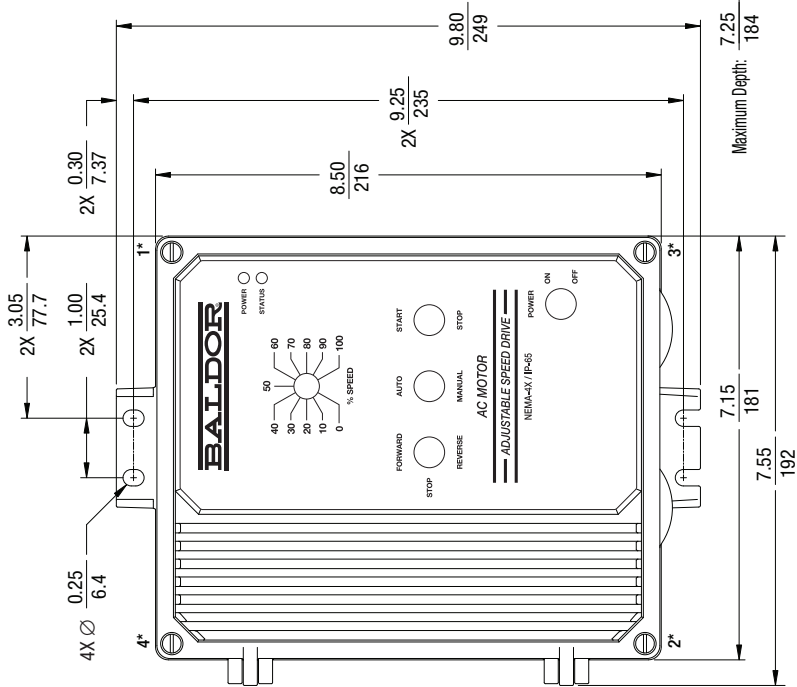

Contains 2 mounting holes for standard 1/2" liquidtight fittings and 1 mounting hole for standard 3/4" liquidtight fitting.

* Tighten these screws, in the sequence shown, to 12 in-lbs (14 kg-cm).

4 IMPORTANT APPLICATION INFORMATION

- 4.1 MOTOR WITH EXTERNAL FAN COOLING** – Most totally enclosed fan-cooled (TEFC) and open ventilated 3-phase AC induction motors will overheat if used beyond a limited speed range at full torque. Therefore, it is necessary to reduce motor load as speed is decreased.

Note: Some fan-cooled motors can be used over a wider speed range. Consult the motor manufacturer for details.


WARNING! Some motors have low speed characteristics which cause overheating and winding failure under light load or no load conditions. If the motor is operated in this manner for an extended period of time, it is recommended that the unloaded motor current be checked from 2 – 15 Hz (60 – 450 RPM) to ensure motor current does not exceed the nameplate rating. **Do not use motor if the motor current exceeds the nameplate rating.**

It is recommended that the drive be used with Inverter Duty or TENV motors.

Inverter duty and most totally enclosed non-ventilated (TENV) motors can provide full rated torque over an extended speed range without overheating. See Figure 5.

If external fan cooling is provided, open ventilated motors can also achieve an extended speed range at full rated torque. A box fan or blower with a minimum of 100 CFM per HP is recommended. Mount the fan or blower so the motor is surrounded by the airflow. See Figure 6.


FIGURE 5 – MAXIMUM ALLOWED MOTOR TORQUE vs. SPEED

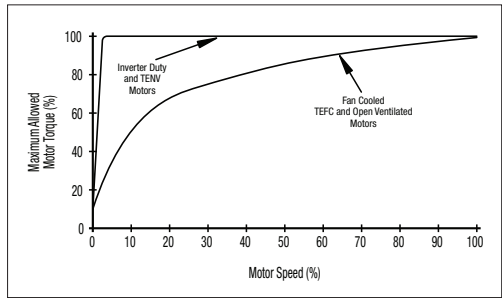

4.2 ELECTRONIC MOTOR OVERLOAD PROTECTION

– The drive contains Modified I²t Overload Protection.* Part of this function consists of a Current Limit (CL) circuit, which limits the drive current to a factory preset level of 160% of the rated drive current. The CL Trimpot is used to recalibrate the drive current from 60% thru 200%. The Power Start™ circuit provides an overshoot function that allows most motors to develop more than 200% of starting torque and breakdown torque.

FIGURE 6 – OPEN VENTILATED MOTOR WITH EXTERNAL FAN COOLING

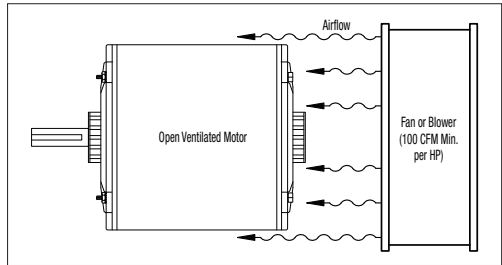

Standard I²t is undesirable because it causes nuisance tripping. It allows a very high motor current to develop and will turn the drive off after a short period of time. The RMS Current Limit Circuit avoids this nuisance tripping while providing maximum motor protection.

If the motor is overloaded to 120% of full load (75% of the CL setting), the I²t Timer starts. If the motor continues to be overloaded at the 120% level, the timer will shut down the drive after 30 minutes. If the motor is overloaded to 160% of full load, the drive will trip in 6 seconds.

*UL approved as an overload protector for motors.

5 WIRING INSTRUCTIONS



WARNING! Read Safety Warning, on page 5, before using the drive. Disconnect main power before making connections to the drive. To avoid electric shock, be sure to properly ground the drive. It is highly recommended that the ID5SI-2 Signal Isolator be installed when using signal following.

Application Note – To avoid erratic operation, do not bundle the AC line and motor wires with each other or with wires from signal following, start/stop contacts, or any other signal wires. Also, do not bundle motor wires from multiple drives in the same conduit. Use shielded cables on all signal wiring over 12" (30 cm). The shield should be earth grounded on the drive side only. Wire the drive in accordance with the National Electrical Code requirements and other local codes that may apply.

Be sure to properly fuse each AC line conductor that is not at ground potential. Do not fuse neutral or grounded conductors. A separate AC line switch or contactor must be wired as a disconnect so that each ungrounded conductor is opened. For fuse or circuit breaker selection, see Table 5. Also see Section 10, on page 21.

To maintain the watertight integrity of the drive, be sure to use suitable watertight connectors and wiring which are appropriate for the application. Catalog No. ID5601 contains two mounting holes for standard 1/2" liquidtight fittings (not supplied) (one watertight plug is provided, if only one knockout is used). Catalog Nos. ID5602, ID5203, ID5403, ID5405 contain two mounting holes for standard 1/2" liquidtight fittings (not supplied) and one mounting hole for standard 3/4" liquidtight fitting (not supplied) (two watertight plugs are provided, if only one knockout is used).

The drive is designed with a hinged case so that when the front cover is open, all wiring stays intact. To open the cover, the four screws must be loosened so they are no longer engaged in the case bottom. After mounting and wiring, close the cover making sure that the wires do not get caught or crimped as the cover is closed. Tighten the four screws so that the gasket is slightly compressed. The recommended tightening torque is 12 in-lbs (14 kg-cm). See Figures 3 and 4, on page 11, for the tightening sequence. Do not overtighten.

TABLE 5 – TERMINAL BLOCK WIRING INFORMATION

Terminal Block	Description	Catalog No.	Maximum Wire Size (Cu)		Recommended Tightening Torque	
			AWG	mm ²	in-lbs	kg-cm
TB1	AC Line Input and Motor Wiring	ID5601	12	3.3	7	8
		ID5602, ID5203, ID5403, ID5405	12	3.3	12	14
TB2	Run/Fault Relay Output Contacts	All	16	1.3	3.5	3

5.1 AC LINE INPUT CONNECTION – Wire the AC line input to Terminal Block TB1.


GFCI Operation – Do not connect this drive to an AC power source controlled by a Ground Fault Circuit Interrupter. Special software is available for GFCI operation – contact your local Baldor District Office.

Note: The rated AC line voltage of the drive must match the actual AC line input voltage. On Catalog Nos. ID5601, ID5602, the setting of Jumper J1 must match the AC line input voltage.

Catalog Nos. ID5601, ID5602:


Designed to accept single-phase (Terminals "L1", "L2") AC line input only. Rated for 208/230 Volt AC line input with Jumper J1 set to the "230V" position (factory setting). Rated for 115 Volt AC line input with Jumper J1 set to the "115V" position. See Figure 7.

FIGURE 7 – CATALOG Nos. ID5601, ID5602*
AC LINE INPUT, MOTOR, AND GROUND CONNECTIONS

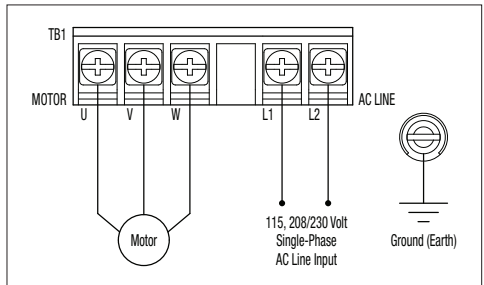

*Catalog No. ID5602 is rated 1½ HP maximum with 115 Volt AC line input and 2 HP maximum with 208/230 Volt AC line input.

FIGURE 8 – CATALOG Nos. ID5203, ID5403, ID5405 AC LINE INPUT, MOTOR, AND GROUND CONNECTIONS

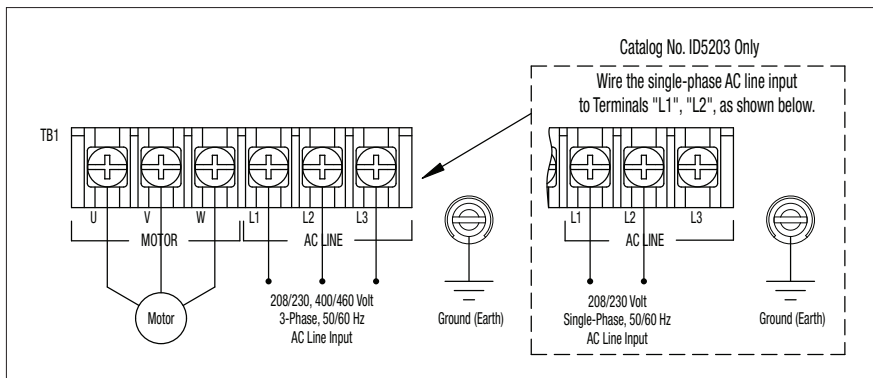

**Catalog No. ID5203 is rated 2 HP maximum with single-phase AC line input and 3 HP maximum with 3-phase AC line input.*

Catalog No. ID5203: Designed to accept single-phase (Terminals “L1”, “L2”) or 3-phase (Terminals “L1”, “L2”, “L3”) AC line input. Rated for 208/230 Volt AC line input only. See Figure 8.

Catalog Nos. ID5403, ID5405: Designed to accept 3-phase (Terminals “L1”, “L2”, “L3”) AC line input only. Rated for 400/460 Volt AC line input only. See Figure 8.

5.2 GROUND CONNECTION – Connect the ground wire (earth) to the Green Ground Screw. The Ground Screw is located next to Terminal Block TB1. See Figure 7, on page 13, and Figure 8.

5.3 MOTOR CONNECTION – Wire the motor to Terminal Block TB1 Terminals “U”, “V”, “W”. See Figure 7, on page 13, and Figure 8. Motor cable length should not exceed 100 ft (30 m) – special reactors may be required – contact your local Baldor District Office.


Be sure Jumper J2 is set to the corresponding motor horsepower rating, as described in Section 6.2, on page 17.

5.4 REMOTE MAIN SPEED POTENTIOMETER CONNECTION – The drive is supplied with a prewired Main Speed Potentiometer mounted on the front cover.

To operate the drive from a remote potentiometer (5 kΩ), remove the white, orange, and violet potentiometer leads from Terminals “P1”, “P2”, and “P3”. The wires may be taped and left inside the drive. The potentiometer assembly may be removed if a watertight seal is used to cover the hole in the front cover.

Wire the Main Speed Potentiometer to Terminals “P1” (low side), “P2” (wiper), and “P3” (high side). See Figure 9.

FIGURE 9 – REMOTE MAIN SPEED POTENTIOMETER CONNECTION

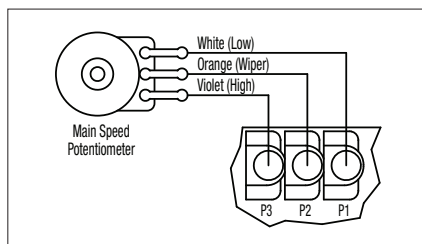

WARNING! Do not earth ground any Main Speed Potentiometer terminals.

Application Note – If it is required that the Remote Main Speed Potentiometer be isolated from the AC line, install the ID5SI-2 Signal Isolator.

5.5 REMOTE START/STOP SWITCH CONNECTION – The drive is supplied with a prewired Start/Stop Switch mounted on the front cover to electronically start and stop the drive.

To operate the drive from a remote Start/Stop Switch (type (ON)-OFF-ON, SPDT), remove the white, black, and red wires from Terminals “RUN”, “COM”, and “STOP”. The wires may be taped and left

inside the drive. The switch assembly may be removed if a liquidtight seal is used to cover the hole in the front cover. After applying power to the drive, momentarily set the Start/Stop switch to the "START" position.

For Start/Stop Switch with normally open stop contact, set Jumper J9 to the "NO" position (factory setting). For Start/Stop Switch with normally closed stop contact, set Jumper J9 to the "NC" position. See Figures 10 and 11. Also see Section 6.8, on page 18.

- 5.6 AUTOMATIC RESTART** – Automatic restart requires the elimination of the Start/Stop Switch. Remove the white, black, and red wires from Terminals "RUN", "COM", and "STOP". The wires may be taped and left inside the drive. The switch assembly may be removed if a liquidtight seal is used to cover the hole in the front cover.

To eliminate the start/stop function, hard-wire Terminals "RUN" and "COM" with the jumper that is provided. Be sure Jumper J9 is set to the "NO" position. See Figure 12.

WARNING! Using a jumper to eliminate the start/stop function will cause the motor to run at the Main Speed Potentiometer setting when the AC line is applied.

- 5.7 VOLTAGE FOLLOWING CONNECTION** – An isolated* 0 – 5 Volt DC analog signal input can also be used to control motor speed in lieu of the Main Speed Potentiometer. The drive output will linearly follow the analog signal input. Wire the signal input positive lead (+) to Terminal "P2" and the negative lead (-) to Terminal "P1". With external circuitry, a 0 – 10 Volt DC analog signal can also be used. See Figure 13.

**If a non-isolated signal is used, install the ID5SI-2 Signal Isolator. The ID5SI-2 accepts voltage (0 to ± 2.5 thru 0 to ± 25 Volts DC) or current (4 – 20 mA DC) signal inputs. See Table 2, on page 8.*

Note: For signal following operation, the Minimum Speed Trimpot (MIN) must be set fully counter-clockwise.



WARNING! The signal input must be isolated from the AC line. Earth grounding signal wiring will damage the drive and void the warranty. It is highly recommended that the ID5SI-2 Signal Isolator be installed when using signal following.

- 5.8 ENABLE CIRCUIT CONNECTION** – The drive can also be started and stopped with an Enable circuit (close to run, open to stop). See Figure 14, on page 16.

FIGURE 10 – REMOTE START/STOP SWITCH CONNECTION WITH NORMALLY OPEN STOP CONTACT
(J9 Installed in "NO" Position)

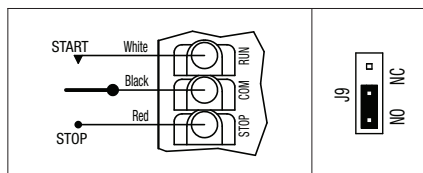


FIGURE 11 – REMOTE START/STOP SWITCH CONNECTION WITH NORMALLY CLOSED STOP CONTACT
(J9 INSTALLED IN "NC" POSITION)

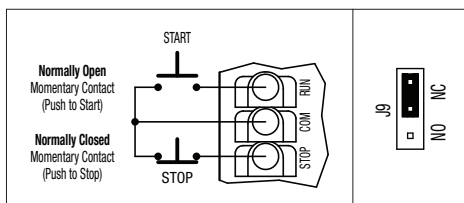


FIGURE 12 – START/STOP FUNCTION ELIMINATED (TERMINALS HARDWIRED) (JUMPER INSTALLED)
(J9 INSTALLED IN "NO" POSITION)


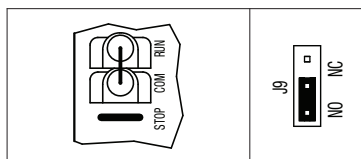



FIGURE 13 – VOLTAGE FOLLOWING CONNECTIONS (ISOLATED)

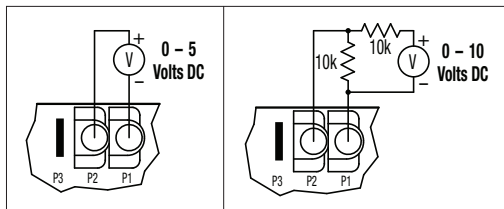

The Enable function is established by wiring a switch or contact in series with the orange Main Speed Potentiometer lead which connects to Terminal “P2”. When the Enable Switch is closed, the motor will accelerate to the Main Speed Potentiometer setting. When the Enable Switch is opened, the motor will decelerate to stop.

WARNING! If the Enable Switch is to be mounted remotely, it is highly recommended that the ID5SI-2 Signal Isolator be installed.

FIGURE 14 – ENABLE CIRCUIT CONNECTION

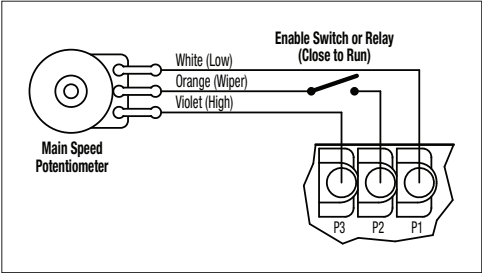

5.9 Run/Fault Relay Connection – The Run/Fault Relay Output Contacts are located at TB2 and can be used to turn on or off equipment or to signal a warning if the drive is put into the Stop Mode or a fault has occurred. See Figure 15.

The Run/Fault Relay Contact status for various drive operating conditions is shown in Table 6.

FIGURE 15 – RUN/FAULT RELAY OUTPUT CONTACTS CONNECTION

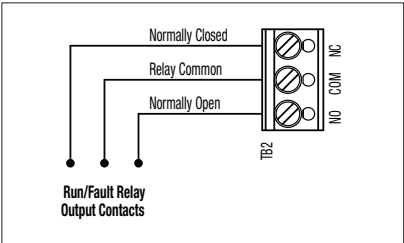


TABLE 6 – DRIVE OPERATING CONDITION AND RUN/FAULT RELAY CONTACT STATUS

Drive Operating Condition	Description	Run Relay Operation (Jumper J8 Installed in “R” Position) (Factory Setting)		Fault Relay Operation (Jumper J8 Installed in “F” Position)	
		Normally Open Contact	Normally Closed Contact	Normally Open Contact	Normally Closed Contact
Power Off	Main Power Disconnected	Open	Closed	Open	Closed
Run Mode*	Normal Drive Operation	Closed	Open	Closed	Open
Stop Mode*	Selected by Operator	Open	Closed	Closed	Open
Fault**	Drive Tripped	Open	Closed	Open	Closed

*Run Mode or Stop Mode is selected using the Start/Stop Switch. **Overload, I²t, Short Circuit, Undervoltage, Overvoltage.

6 SETTING SELECTABLE JUMPERS


The drive has customer selectable jumpers which must be set before the drive can be used. For the location of jumpers, see Figure 2, on page 9.

Note: Disconnect the AC line before changing position of jumpers.

6.1 LINE INPUT VOLTAGE SELECTION (J1 (CATALOG NOS. ID5601, ID5602))

– Jumper J1 is factory installed on Terminal “230V” for 208/230 Volt AC line input. For 115 Volt AC line input, the jumper must be removed and installed on Terminal “115V”. See Figure 16.


FIGURE 16 – CATALOG Nos. ID5601*, ID5602 AC LINE INPUT VOLTAGE SELECTION

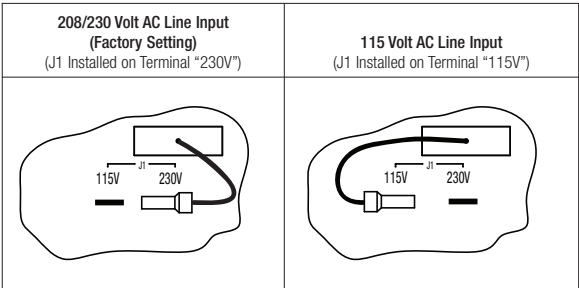

*Layout of Catalog No. ID5601 varies slightly.

Using pliers, gently rock the female terminal back and forth while pulling it upward. See Figure 17

FIGURE 17 – REMOVING JUMPER J1 ON CATALOG NOS. ID5601, ID5602

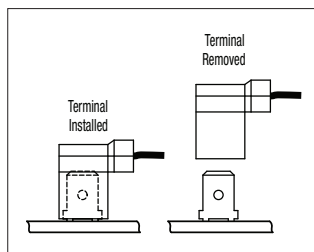

6.2 MOTOR HORSEPOWER SELECTION (J2) – Set Jumper J2 to the corresponding position for the motor being used. See Figure 18.

6.3 AUTOMATIC RIDE-THROUGH OR MANUAL RESTART SELECTION (J3) – Jumper J3 is factory set to the “A” position for Automatic Ride-Through. If the power is interrupted for up to 2 seconds, the drive will shut down and then “ride-through” and automatically return to the set frequency. If Jumper J3 is set to the “M” position, the drive will have to be manually restarted for a momentary power loss using the Start/Stop Switch. See Figure 19. Also see Section 11.2, on page 22, for the Status (ST) LED indication.

6.4 60 Hz AND 50 Hz MOTOR OPERATION AND DRIVE OUTPUT FREQUENCY SELECTION (J4 AND J5) – Both jumpers must be set for the appropriate motor nameplate frequency rating.

FIGURE 18 – MOTOR HORSEPOWER SELECTION

	Catalog No. ID5601	Catalog No. ID5602		Catalog No. ID5203*	Catalog No. ID5403*	Catalog No. ID5405*
	1	2**	A	3***	3	5
	3/4	1½**	B	2***	2	3
	1/2	1	C	1½	1½	2
	1/4	3/4	D	1	1	1½
	1/8	1/2	E	3/4	3/4	1

*The factory setting is shown in **bold**.*

**Jumper J2 on Catalog Nos. ID5203, ID5403, ID5405 is labeled “A”, “B”, “C”, “D”, “E”.*

***Catalog No. ID5602 is rated 1½ HP maximum with 115 Volt AC line input and 2 HP maximum with 208/230 Volt AC line input. ***Catalog No. ID5203 is rated 2 HP maximum with single-phase AC line input and 3 HP maximum with 3-phase AC line input.*

6.4.1 SETTING THE DRIVE FOR 60 Hz OR 50 Hz MOTOR OPERATION –

The drive is factory set to operate 60 Hz motors. Jumper J4 is factory set to the “1X” position and Jumper J5 is factory set to the “60Hz” position. For 50 Hz motors, set Jumper J5 to the “50Hz” position, and be sure Jumper J4 is set to the “1X” position. See Figure 20.

FIGURE 19 – AUTOMATIC RIDE-THROUGH OR MANUAL RESTART SELECTION

Automatic Ride-Through (Factory Setting) (J3 Installed in “A” Position)	Manual Restart (J3 Installed in “M” Position)

6.4.2 SETTING THE DRIVE FOR TWO TIMES THE RATED MOTOR RPM –

The drive can also be used to operate the motor up to two times the rated RPM. However, constant horsepower will result when operating the drive in the “2X” mode above the motor rated frequency. See Figure 21, on page 18.

For 120 Hz output with 60 Hz motor, set Jumper J4 to the “2X” position and be sure Jumper J5 is set to the “60Hz” position. For 100 Hz output with 50 Hz motor, set Jumper J4 to the “2X” position and set Jumper J5 to the “50Hz” position. See Figure 22, on page 18.

**FIGURE 20
60 Hz & 50 Hz MOTOR SELECTION**

60 Hz Motor Operation (Factory Setting) (J4 Installed in “1X” Position) (J5 Installed in “60Hz” Position)		50 Hz Motor Operation (J4 Installed in “1X” Position) (J5 Installed in “50Hz” Position)	

6.5 BOOST MODE SELECTION

(J6) – Jumper J6 is factory set to the “FIX” position for Fixed Boost. For Adjustable Boost using the BOOST Trimpot, set Jumper J6 to the “ADJ” position. See Figure 23. Also see Section 12.8, on pages 24 – 25, for the BOOST Trimpot range.

6.6 BRAKING MODE SELECTION (J7) –

Jumper J7 is factory set to the “RG” position for Regenerative Braking when the Start/Stop Switch is set to the “STOP” position. For DC Injection Braking, set Jumper J7 to the “INU” position. See Figure 24. Also see Section 12.5, on page 23.

When the Injection Brake Mode is selected, the DECEL Trimpot is used to adjust the brake time and intensity.

6.7 RUN/FAULT OUTPUT RELAY OPERATION SELECTION (J8) –

Jumper J8 is factory set to the “R” position for “Run” operation of the Run/Fault Relay. For “Fault” operation of the Run/Fault Relay, set Jumper J8 to the “F” position. See Figure 25, on page 19.

For Run/Fault Relay output contacts, see Section 5.8, on pages 15 – 16. The Run/Fault Relay contact status for various drive operating conditions is shown in Table 6, on page 16.

6.8 STOP CONTACT SELECTION (J9) –

Jumper J9 is factory set to the “NO” position for a normally open stop contact. For remote normally closed stop contact, set Jumper J9 to the “NC” position. See Figure 26, on page 19. For wiring information, see Section 5.5, on pages 14 – 15.

6.9 TORQUE MODE SELECTION (J10) –

Jumper J10 is factory set to the “CT” position for Constant Torque Mode, which is desirable for most machine applications. For Variable Torque Mode, used for HVAC and fan applications, set Jumper J10 to the “VT” position. See Figure 27, on page 19.

6.10 I²t OVERLOAD SELECTION (J11) – Jumper J11 is factory set to the “1” position for Inverter Duty Rated Motors. For Non Inverter Duty Rated Motors and HVAC applications, set Jumper J11 to the “2”

FIGURE 21 – AVAILABLE TORQUE vs. OUTPUT FREQUENCY

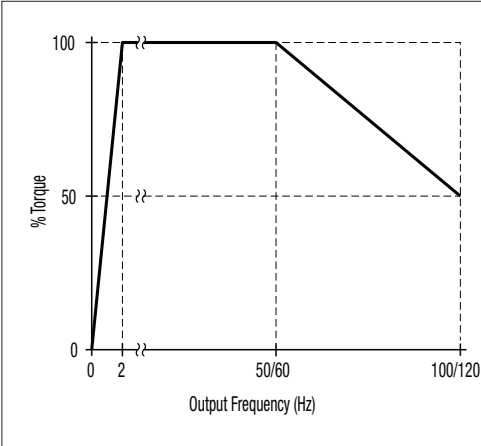


FIGURE 22

120 Hz & 100 Hz DRIVE OUTPUT FREQUENCY SELECTION

120 Hz Output with 60 Hz Motor (J4 Installed in "2X" Position) (J5 Installed in "60Hz" Position)		100 Hz Output with 50 Hz Motor (J4 Installed in "2X" Position) (J5 Installed in "50Hz" Position)	

FIGURE 23 – FIXED OR ADJUSTABLE BOOST SELECTION

Fixed Boost (Factory Setting) (J6 Installed in "FIX" Position)	Adjustable Boost (J6 Installed in "ADJ" Position)

FIGURE 24 – REGENERATIVE OR DC INJECTION BRAKING SELECTION

Regenerative Braking (Factory Setting) (J7 Installed in "RG" Position)	DC Injection Braking (J7 Installed in "INU" Position)

position. See Figure 28, on page 19.
Also see Section 12.7, on page 24.

7 MOUNTING INSTRUCTIONS

It is recommended that the drive be mounted vertically on a flat surface with adequate ventilation. Leave enough room below the drive to allow for AC line, motor connections, and any other wiring that is required.

Although the drive is designed for outdoor and washdown use, care should be taken to avoid extreme hazardous locations where physical damage can occur. When mounting the drive in an enclosure, the enclosure should be large enough to allow for proper heat dissipation so that the ambient temperature does not exceed 45 °C (113 °F) at full rating.



See Figures 3 and 4, on page 11.

WARNING! Do not use this drive in an explosion-proof application.

8 RECOMMENDED HIGH VOLTAGE DIELECTRIC WITHSTAND TESTING (HI-POT TESTING)

Testing agencies such as UL, CSA, VDE, etc., usually require that equipment undergo a hi-pot test. In order to prevent catastrophic damage to the drive which has been installed in the equipment, the following procedure is recommended. A typical hi-pot test setup is shown in Figure 29, on page 20. **All drives**



have been factory hi-pot tested in accordance with UL requirements.

WARNING! All equipment AC line inputs must be disconnected from the AC power.

8.1 Connect all equipment AC power input lines together and connect them to the H.V. lead of the hi-pot tester. Connect the RETURN lead of the hi-pot tester to the frame on which the drive and other auxiliary equipment are mounted.

8.2 The hi-pot tester must have an automatic ramp-up to the test voltage and an automatic ramp-down to zero voltage.

Note: If the hi-pot tester does not have automatic ramping, then the hi-pot output must be manually increased to the test voltage and then manually reduced to zero. This procedure must be followed for each machine to be tested. A suggested hi-pot tester is Slaughter Model 2550.

CAUTION! Instantly applying the hi-pot voltage will cause irreversible damage to the drive, which will void the warranty.

FIGURE 25 – “RUN” OR “FAULT”
OUTPUT RELAY OPERATION SELECTION

“Run” Output Relay Operation (Factory Setting) (J8 Installed in “R” Position)	“Fault” Output Relay Operation (J8 Installed in “F” Position)

FIGURE 26 – NORMALLY OPEN
OR CLOSED STOP CONTACT SELECTION

Normally Open Stop Contact (Factory Setting) (J9 Installed in “NO” Position)	Normally Closed Stop Contact (J9 Installed in “NC” Position)


FIGURE 27 – CONSTANT OR VARIABLE TORQUE SELECTION

Constant Torque (Factory Setting) (J10 Installed in “CT” Position)	Variable Torque (J10 Installed in “VT” Position)

FIGURE 28 – I²t OVERLOAD SELECTION

Inverter Duty Rated Motor (Factory Setting) (J11 Installed in “1” Position)	Non Inverter Duty Rated Motor Operation (J11 Installed in “2” Position)

FIGURE 29 – TYPICAL HI-POT TEST SETUP

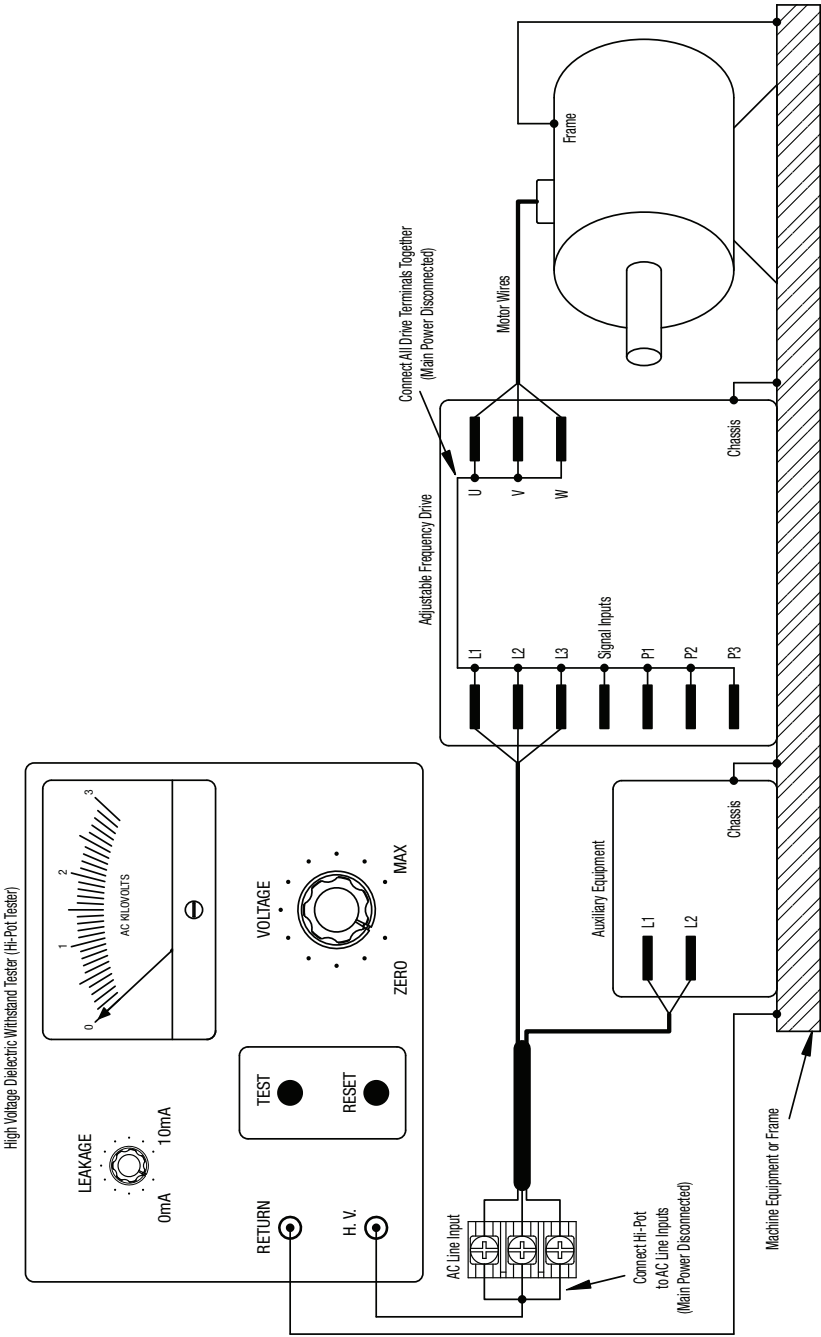

9 DRIVE OPERATION

- 9.1 START-UP PROCEDURE** – After the drive has been properly setup (jumpers and trimpots set to the desired positions) and wiring completed, the start-up procedure can begin. Set the On/Off AC Line Switch to the “ON” position. If the AC power has been properly brought to the drive, the power (PWR) LED will illuminate green. The status (ST) LED will indicate drive status, as described in Section 11.2.

To start the drive, momentarily set the Start/Stop Switch to the “START” position. The motor will begin to accelerate to the set speed.



WARNING! Using a jumper to eliminate the start/stop function will cause the motor to run at the Main Speed Potentiometer setting when the AC line is applied. See Section 9.2.

Note: If the motor rotates in the incorrect direction, it will be necessary to disconnect the AC line, reverse any two motor leads, and repeat the start-up procedure.

- 9.2 STARTING THE DRIVE AFTER A FAULT HAS BEEN CLEARED^{1,2}** – The drive monitors four faults (Undervoltage, Overvoltage, Short Circuit (at the motor (phase-to-phase)), and Overload). See Section 11.2 for the Status (ST) LED indication. Also see Section 6.3, on page 17, for Automatic Ride-Through or Manual Restart selection with Jumper J3.

To start the drive after a fault has been cleared, use the Start/Stop Switch^{2,3}.

If the Start/Stop Switch has been eliminated (bypassed), see Section 5.6, on page 15.⁴ The drive can be started (after the fault has been cleared), by disconnecting the AC power until all LEDs are no longer illuminated and then reconnecting the AC power.

Notes: **1.** For an Overload Fault, be sure the fault has been cleared before restarting the drive. Check the motor current with an AC RMS responding ammeter. Also, the CL setting may be set too low. See Section 12.7, on page 24. **2.** For an Overvoltage Fault, if the drive is set for Automatic Ride-Through, the drive will automatically restart when the AC line voltage returns to below the specified Overvoltage Trip Point. **3.** If the Forward-Stop-Reverse Switch has been installed, it can be used to restart the drive. **4.** If the Start/Stop Switch has been eliminated (bypassed), the AC line must be used to start the drive after an Overload Fault has been cleared.

10 AC LINE FUSING

The drive does not contain line fuses. Most electrical codes require that each ungrounded conductor contain circuit protection. **Do not fuse neutral or ground connections.** It is recommended to install a fuse (Littelfuse 312/314, Buss ABC, or equivalent) or a circuit breaker in series with each ungrounded conductor. **Do not fuse motor leads.** For the recommended fuse size, see Table 4, on page 10.

Wire the drive in accordance with the National Electrical Code requirements and other local codes that may apply to the application.

11 DIAGNOSTIC LEDS

The drive contains two diagnostic LEDs mounted on the enclosure cover to display the drive's operational status.

- 11.1 POWER ON LED (PWR)** – The “PWR” LED will illuminate green when the AC line is applied to the drive.



WARNING! Do not depend on the PWR LED as a guaranteed power off condition. Be sure the main power switch or circuit breaker is in the “OFF” position before servicing this drive.

- 11.2 STATUS LED (ST)** – The “ST” LED is a tricolor LED which provides indication of a fault or abnormal condition. The information provided can be used to diagnose an installation problem such as incorrect input voltage, overload condition, and drive output miswiring. It also provides a signal which informs

the user that all drive and microcontroller operating parameters are normal. Table 7, summarizes the “ST” LED functions.

TABLE 7 – DRIVE OPERATING CONDITION AND STATUS LED INDICATOR

Drive Operating Condition	Flash Rate ¹ and LED Color
Normal Operation	Slow Flash Green
Overload (120% – 160% Full Load)	Steady Red ²
I ² t (Drive Timed Out)	Quick Flash Red ²
Short Circuit	Slow Flash Red
Undervoltage	Quick Flash Red / Yellow ³
Overvoltage	Slow Flash Red / Yellow ³
Stop	Steady Yellow
Stand-By ⁴	Slow Flash Yellow

Notes: 1. Slow Flash = 1 second on and 1 second off. Quick Flash = 0.25 second on and 0.25 second off. 2. When the Overload is removed, before the I²t times out and trips the drive, the “ST” LED will flash green. 3. When the Undervoltage or Overvoltage condition is corrected, the “ST” LED will flash Red / Yellow / Green. 4. Only if the Forward-Stop-Reverse Switch is installed.

12 TRIMPOT ADJUSTMENTS

The drive contains trimpots which are factory set for most applications. See Figure 2, on page 9, for the location of the trimpots and their approximate factory calibrated positions. Some applications may require readjustment of the trimpots in order to tailor the drive for a specific requirement. The trimpots may be readjusted as described below.



WARNING! If possible, do not adjust trimpots with the main power applied. If adjustments are made with the main power applied, an insulated adjustment tool must be used and safety glasses must be worn. High voltage exists in this drive. Fire and/or electrocution can result if caution is not exercised. Safety Warning, on page 5, must be read and understood before proceeding.

12.1 MINIMUM SPEED (MIN) – Sets the minimum speed of the motor. The MIN Trimpot is factory set to 0% of frequency setting. For a higher minimum speed setting, rotate the MIN Trimpot clockwise. See Figure 30.

12.2 MAXIMUM SPEED (MAX) – Sets the maximum speed of the motor. The MAX Trimpot is factory set to 100% of frequency setting. For a lower maximum speed setting, rotate the MAX Trimpot counterclockwise. For a higher maximum speed setting, rotate the MAX Trimpot clockwise. See Figure 31.

12.3 ACCELERATION (ACCEL) – Sets the amount of time for the motor to accelerate from zero speed to full speed. The ACCEL Trimpot is factory set to 1.5 seconds. For a longer acceleration time, rotate the ACCEL Trimpot clockwise. For more rapid acceleration, rotate the ACCEL Trimpot counterclockwise. See Figure 32.

Note: Rapid acceleration settings may cause the current limit circuit to activate, which will extend the acceleration time.

FIGURE 30 – MINIMUM SPEED TRIMPOT RANGE

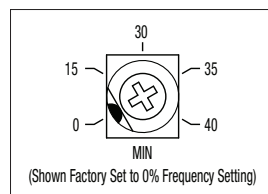


FIGURE 31 – MAXIMUM SPEED TRIMPOT RANGE


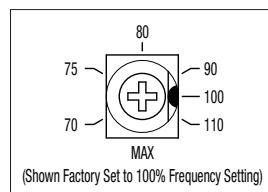


FIGURE 32 – ACCELERATION TRIMPOT RANGE

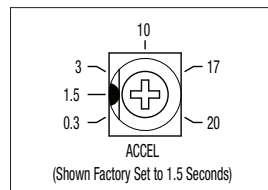

- 12.4 DECELERATION (DECEL)** – Sets the amount of time for the motor to decelerate from full speed to zero speed. The DECEL Trimpot is factory set to 1.5 seconds. For longer deceleration time, rotate the DECEL Trimpot clockwise. For more rapid deceleration, rotate the DECEL Trimpot counterclockwise. See Figure 33.

Application Note – On applications with high inertial loads, the deceleration may automatically increase in time. This will slow down the rate of speed of decrease to prevent the bus voltage from rising to the Overvoltage Trip point. This function is called Regeneration Protection. **It is recommended that for very high inertial loads that both the ACCEL and DECEL Trimpots be set to greater than 10 seconds.**

- 12.5 DC INJECTION BRAKE (DECEL)** – The drive is factory set for Regenerative Braking (Jumper J7 set to the “RG” position). When the drive is set for DC Injection Brake (Jumper J7 set to the “INJ” position), the DECEL trimpot is used to set the DC Injection Brake voltage and time. See Figure 34. Also see Section 6.6, on page 18.

The DC Injection Brake voltage and time range is 10% of full drive output voltage for 3 seconds with the trimpot fully clockwise and 25% of full drive output voltage for 1 second with the trimpot fully counterclockwise. Catalog Nos. ID5601, ID5602, ID5203 are factory set for 49 Volts for 1.2 seconds and Catalog Nos. ID5403, ID5405 are factory set for 98 Volts for 1.2 seconds.

Adjust the trimpot so that the load stops within the required time.

- 12.6 SLIP COMPENSATION (COMP)** – Sets the amount of Volts/Hz to maintain set motor speed under varying loads. The COMP Trimpot is factory set to 1.5 Volts/Hz, which provides excellent speed regulation for most motors. To increase the slip compensation, rotate the COMP Trimpot clockwise. To decrease the slip compensation, rotate the COMP Trimpot counterclockwise. See Figure 35.

The slip compensation may be adjusted as follows:

1. Wire an AC RMS ammeter in series with one motor phase.
2. Run the motor and set the unloaded speed to approximately 50% (900 RPM on 4-pole 1500/1725 RPM motors).
3. Using a tachometer, record the unloaded speed.
4. Load the motor to the nameplate rated current (AC Amps).
5. Adjust the COMP Trimpot until the loaded RPM is equal to the unloaded RPM.
6. The motor is now compensated to provide constant speed under varying loads.

FIGURE 33 – DECELERATION TRIMPOT RANGE

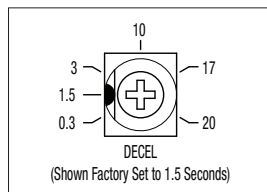


FIGURE 34 – DC INJECTION BRAKE TRIMPOT RANGE

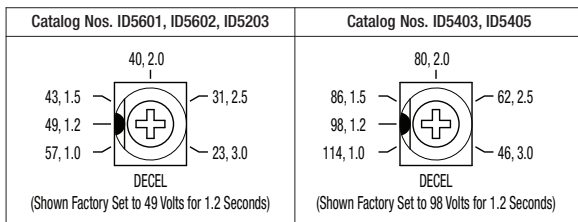


FIGURE 35 – SLIP COMPENSATION TRIMPOT RANGE


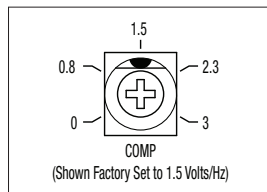


FIGURE 36 – CURRENT LIMIT TRIMPOT RANGE

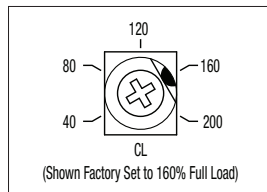

12.7 MOTOR OVERLOAD (I^2t) WITH RMS CURRENT LIMIT (CL)* – Sets the current limit (overload), which limits the maximum current to the motor, which prevents motor burnout and eliminates nuisance trips. The CL Trimpot is factory set to 160% of the drive rated current. To increase the current limit, rotate the CL Trimpot clockwise. To decrease the current limit, rotate the CL Trimpot counterclockwise. See Figure 36, on page 23, and Figure 37.

**UL approved as an electronic overload protector for motors.*


CAUTION! Adjusting the current limit above 160% of the motor nameplate rating can cause overheating of the motor. Consult the motor manufacturer. Do not leave the motor in a locked rotor condition for more than a few seconds since motor damage may occur.

In order to ensure that the motor is properly protected with the I^2t feature, it is required that the CL Trimpot be set for 160% of the motor nameplate rated current, as described below.

Note: This adjustment must be made within 6 seconds or the I^2t Trip will occur.

The current limit may be adjusted as follows:

1. Connect an AC RMS ammeter in series with one motor phase.
2. Set the CL Trimpot fully counterclockwise.
3. Adjust the speed setting to 30%.
4. Lock the motor shaft and adjust the CL Trimpot to 160% of the motor nameplate rated current.

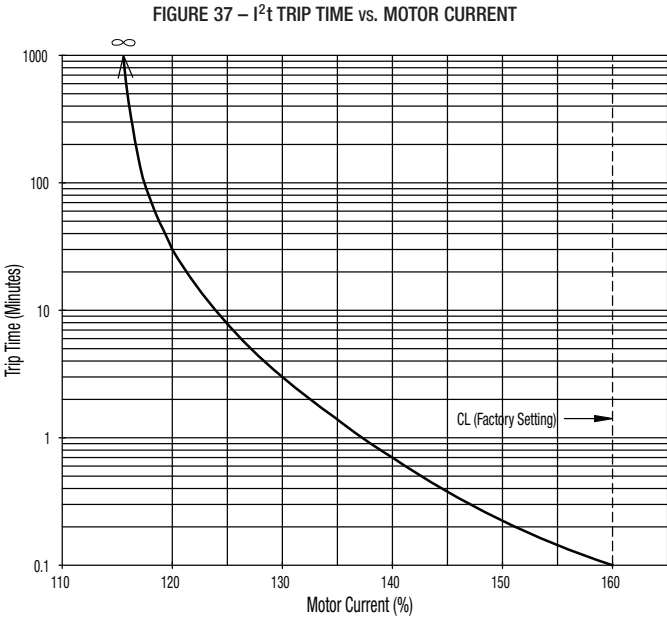

12.8 BOOST (BOOST) – The drive is factory set for Fixed Boost (Jumper J6 set to the “FIX” position). When the drive is set for Adjustable Boost (Jumper J6 set to the “ADJ” position), the BOOST Trimpot can be used to adjust the amount of boost voltage to the motor. See Figure 38, on page 25. Also see Section 6.5, on page 18.

Application Note – The Boost function operates over a frequency range of 0 – 15 Hz. If the frequency range required is above 15 Hz, Boost adjustment is not necessary.

WARNING! To avoid motor winding overheating and failure, do not overboost the motor.

Note: An unloaded motor with excessive boost will draw more current than a partially loaded motor.

The boost voltage may be adjusted as follows:

1. Wire an AC RMS ammeter in series with one motor phase.
2. Run the motor unloaded at approximately 4 Hz (or 120 RPM).
3. Increase the boost until the ammeter reaches the motor nameplate rated current (Amps AC).
4. Using the Main Speed Potentiometer, slowly adjust the motor speed over a 1 – 15 Hz (0 – 450 RPM) range. If the motor current exceeds the nameplate rating, decrease the boost setting.

12.9 JOG (JOG) – The Jog feature requires the installation of a Run-Stop-Jog Switch. The switch must be wired according to Figure 39. The JOG Trimpot range is shown in Figure 40.

The orange Main Speed Potentiometer wire (wiper) which connects to Terminal “P2” on the drive must be removed and installed on Terminal “RUN” on the switch. The “JOG” Terminal on the drive connects to “JOG” on the switch. Terminal “P2” on the drive connects to the center (common) terminal on the switch.

When the switch is in the “JOG” position, the JOG Trimpot is used to set the “jog” speed. When the switch is in the “RUN” position, the Main Speed Potentiometer is used for speed setting.

FIGURE 38 – BOOST TRIMPOT RANGE

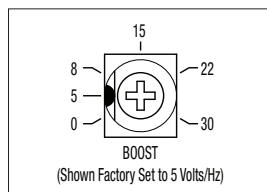


FIGURE 39 – RUN-STOP-JOG SWITCH CONNECTION (SPDT – CENTER OFF)



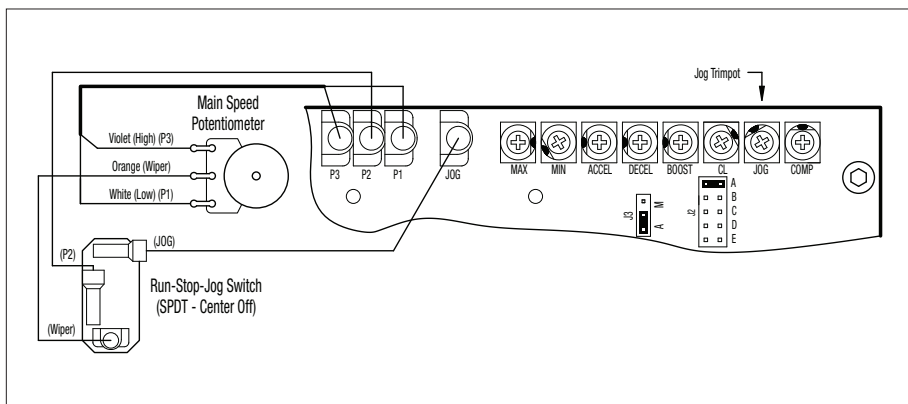


FIGURE 40 – JOG TRIMPOT RANGE

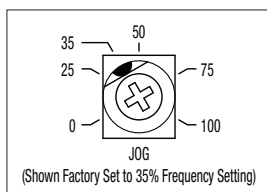


– APPENDIX –


CATALOG No. ID5601
ON/OFF AC LINE SWITCH CONNECTION

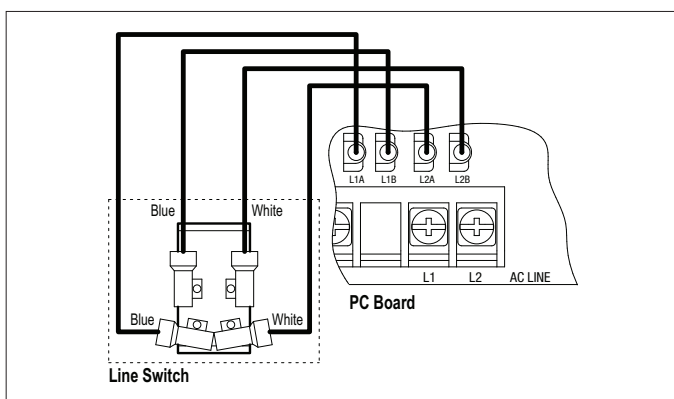

CATALOG No. ID5602
ON/OFF AC LINE SWITCH CONNECTION

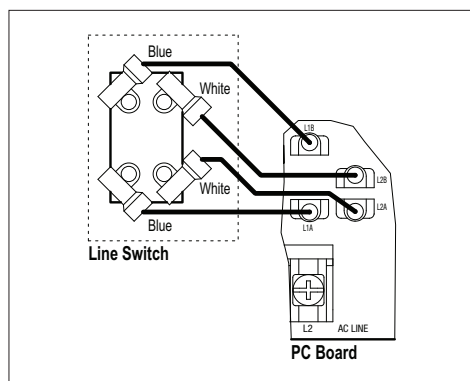

CATALOG No. ID5203, ID5403, ID5405
ON/OFF AC LINE SWITCH CONNECTION

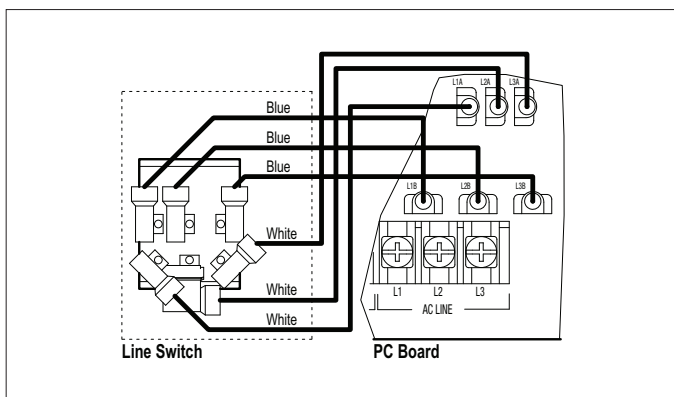

Baldor District Offices

UNITED STATES

ARIZONA

PHOENIX

4211 S 43RD PLACE
PHOENIX, AZ 85040
PHONE: 602-470-0407
FAX: 602-470-0464

ARKANSAS

CLARKSVILLE

1001 COLLEGE AVE.
CLARKSVILLE, AR 72830
PHONE: 479-754-9108
FAX: 479-754-9205

CALIFORNIA

LOS ANGELES

6480 FLOTTILLA
COMMERCE, CA 90004
PHONE: 323-724-6771
FAX: 323-721-5859

HAYWARD

21056 FORBES STREET
HAYWARD, CA 94545
PHONE: 510-785-9900
FAX: 510-785-9910

COLORADO

DENVER

2520 W BARBERRY PLACE
DENVER, CO 80204
PHONE: 303-623-0127
FAX: 303-595-3772

CONNECTICUT

WALLINGFORD

65 SOUTH TURNPIKE ROAD
WALLINGFORD, CT 06492
PHONE: 203-269-1354
FAX: 203-269-5485

FLORIDA

TAMPA/PUERTO RICO/ VIRGIN ISLANDS

3906 EAST 11TH AVENUE
TAMPA, FL 33605
PHONE: 813-248-5078
FAX: 813-247-2984

GEORGIA

ATLANTA

62 TECHNOLOGY DR.
ALPHARETTA, GA 30005
PHONE: 770-772-7000
FAX: 770-772-7200

ILLINOIS

CHICAGO

1601 FRONTENAC ROAD
NAPERVILLE, IL 60563
PHONE: 630-848-5100
FAX: 630-848-5110

INDIANA

INDIANAPOLIS

5525 W. MINNESOTA STREET
INDIANAPOLIS, IN 46241
PHONE: 317-246-5100
FAX: 317-246-5110
800-428-4141

IOWA

DES MOINES

1800 DIXON STREET, SUITE C
DES MOINES, IA 50316
PHONE: 515-263-6929
FAX: 515-263-6515

MARYLAND

BALTIMORE

6660 SANTA BARBARA RD.
SUITE 22-24
ELKRIDGE, MD 21075
PHONE: 410-579-2135
FAX: 410-579-2677

MASSACHUSETTS

BOSTON

6 PULLMAN STREET
WORCESTER, MA 01606
PHONE: 508-854-0708
FAX: 508-854-0291

MICHIGAN

DETROIT

33782 STERLING PONDS BLVD.
STERLING HEIGHTS, MI 48312
PHONE: 586-978-9800
FAX: 586-978-9969

GRAND RAPIDS

668 3 MILE ROAD NW
GRAND RAPIDS, MI 49504
PHONE: 616-785-1784
FAX: 616-785-1788

MINNESOTA

MINNEAPOLIS

21080 134TH AVE. NORTH
ROGERS, MN 55374
PHONE: 763-428-3633
FAX: 763-428-4551

MISSOURI

ST LOUIS

422 INDUSTRIAL DRIVE
MARYLAND HEIGHTS, MO 63043
PHONE: 314-298-1800
FAX: 314-298-7660

KANSAS CITY

1501 BEDFORD AVENUE
NORTH KANSAS CITY, MO 64116
PHONE: 816-587-0272
FAX: 816-587-3735

NEW YORK

AUBURN

ONE ELLIS DRIVE
AUBURN, NY 13021
PHONE: 315-255-3403
FAX: 315-253-9923

NORTH CAROLINA

GREENSBORO

1220 ROTHERWOOD ROAD
GREENSBORO, NC 27406
P O BOX 16500
GREENSBORO, NC 27416
PHONE: 336-272-6104
FAX: 336-273-6628

OHIO

CINCINNATI

2929 CRESCENTVILLE ROAD
WEST CHESTER, OH 45069
PHONE: 513-771-2600
FAX: 513-772-2219

CLEVELAND

8929 FREEWAY DRIVE
MACEDONIA, OH 44056
PHONE: 330-468-4777
FAX: 330-468-4778

OKLAHOMA

TULSA

2 EAST DAWES
BOKSY, OK 74008
PHONE: 918-366-9320
FAX: 918-366-9338

OREGON

PORTLAND

20393 SW AVERY COURT
TUALATIN, OR 97062
PHONE: 503-691-9010
FAX: 503-691-9012

PENNSYLVANIA

PHILADELPHIA

1035 THOMAS BUSCH
MEMORIAL HIGHWAY
PENNNSAUKEN, NJ 08110
PHONE: 856-661-1442
FAX: 856-663-6363

PITTSBURGH

618H BEATTY ROAD
MONROEVILLE, PA 15146
PHONE: 412-380-7244
FAX: 412-380-7250

TENNESSEE

MEMPHIS

4000 WINCHESTER ROAD
MEMPHIS, TN 38118
PHONE: 901-365-2020
FAX: 901-365-3914

TEXAS

HOUSTON

4647 PINE TIMBERS
SUITE # 135
HOUSTON, TX 77041
PHONE: 713-895-7062
FAX: 713-690-4540

DALLAS

3040 QUEBEC

DALLAS, TX 75247
PHONE: 214-634-7271
FAX: 214-634-8874

UTAH

SALT LAKE CITY

2230 SOUTH MAIN STREET
SALT LAKE CITY, UT 84115
PHONE: 801-832-0127
FAX: 801-832-8911

WISCONSIN

MILWAUKEE

2725 SOUTH 163RD STREET
NEW BERLIN, WI 53151
PHONE: 262-784-5940
FAX: 262-784-1215

INTERNATIONAL SALES

FORT SMITH, AR

P.O. BOX 2400
FORT SMITH, AR 72902
PHONE: 479-646-4711
FAX: 479-648-5895

CANADA

EDMONTON, ALBERTA

4053-92 STREET
EDMONTON, ALBERTA T6E 6R8
PHONE: 780-434-4900
FAX: 780-438-2600

OAKVILLE, ONTARIO

2750 COVENTRY ROAD
OAKVILLE, ONTARIO L6H 6R1
PHONE: 905-829-3301
FAX: 905-829-3302

MONTREAL, QUEBEC

1844 WILLIAM STREET
MONTREAL, QUEBEC H3J 1R5
PHONE: 514-933-2711
FAX: 514-933-8639

VANCOUVER, BRITISH COLUMBIA

1538 KEBET WAY
PORT COQUITLAM, BC V3C 5M5
PHONE 604-421-2822
FAX: 604-421-3113

WINNIPEG, MANITOBA

54 PRINCESS STREET
WINNIPEG, MANITOBA R3B 1K2
PHONE: 204-942-5205
FAX: 204-956-4251

AUSTRALIA

UNIT 3, 6 STANTON ROAD
SEVEN HILLS, NSW 2147,
AUSTRALIA
PHONE: (61) (2) 9674 5455
FAX: (61) (2) 9674 2495

UNIT 8, 5 KELLETTS ROAD
ROWVILLE, VICTORIA, 3178
AUSTRALIA
PHONE: (61) (3) 9753 4355
FAX: (61) (3) 9753 4366

América DEL SUR

APTDO. 9109 0818 ZONA 6
BETHANIA,
CIUDAD DE PANAMÁ, PANAMÁ
PHONE: +507 261-5347
FAX: +507 261-5355

CENTRO AMÉRICA Y CARIBE

RESIDENCIAL PINARES DE SUIZA
POL. 15 #44,
NVA. SAN SALVADOR, EL SALVADOR
PHONE: +503 2288-1519
FAX: +503 2288-1518

CHINA

SHANGHAI JIAHUA BUSINESS CENTER
ROOM NO. A-8421
808 HONG QIAO ROAD
SHANGHAI 200030
PHONE: 86-21-64473060
FAX: 86-21-64078620

GERMANY

DIESELSTRASSE 22
D-85551 KIRCHHEIM

MUNICH, GERMANY
PHONE: (49) (89) 90508 0
FAX: (49) (89) 90508 492

INDIA

14, COMMERCE AVENUE
MAHAGANESH COLONY
PAUD ROAD
PUNE - 411 038
MAHARASHTRA, INDIA
PHONE: 91 20 25 45 95 30
FAX: 91 20 5 4 95 30

ITALY

BALDOR ASR AG
SUCCURSIALE DI MENDRISIO
VIA BORROMINI, 20A
CH-6850 MENDRISIO
SWITZERLAND
PHONE: 41 91 640 9952
FAX: 41 91 630 2633

JAPAN

DIA BLDG 802,
2-21-1 TSURUYA-CHO,
KANAGAWA-KU
YOKOHAMA, 221-0835, JAPAN
PHONE: 81-45-412-4506
FAX: 81-45-412-4507

KOREA

ROOM 208-37
INCHEON INDUSTRIAL GOODS
CIRCULATING CENTER
SONGHYEON 3-DONG, DONG-GU
INCHEON, KOREA, 401-705
PHONE: 82 32 588 3253
FAX: 82 32 588 3254

MÉXICO

KM. 2.0 BLVD. AL AEROPUERTO
LEON 37545, GUANAJUATO,
MÉXICO
PHONE: 52 477 761 2030
FAX: 52 477 761 2010

MIDDLE EAST & NORTH AFRICA

YSE INTERNATIONAL CORP.
3233 NORTH ARLINGTON HEIGHTS
SUITE 100W
ARLINGTON HEIGHTS, IL 60004
PHONE: 847 590 5547

SINGAPORE

51 KAKI BLUKT ROAD 2
K B WAREHOUSE COMPLEX
SINGAPORE 417863
PHONE: (65) 6 744 2572
FAX: (65) 6 747 1708

SWITZERLAND

POSTRACH 73
SCHUTZENSTRASSE 59
CH-8245 FEUERTHALEN
SWITZERLAND
PHONE: (41) (52) 6474700
FAX: (41) (52) 6592394

TAIWAN

4F, NO. 25, SEC. 1,
TUNHUA S ROAD,
TAIPEI 10557, TAIWAN, R.O.C.
PHONE: (886-2) 2577-4352
FAX: (886-2) 2577-4157

UNITED KINGDOM

6 BRISTOL DISTRIBUTION PARK
HAWKLEY DRIVE
BRISTOL BS32 0BF U.K.
PHONE: 44 1454 859000
FAX: 44 1454 8590019

LIMITED WARRANTY

For a period of 2 years from date of original purchase, BALDOR will repair or replace without charge controls which our examination proves to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused, or improperly installed and has been used in accordance with the instructions and/or ratings supplied. This warranty is in lieu of any other warranty or guarantee expressed or implied. BALDOR shall not be held responsible for any expense (including installation and removal), inconvenience, or consequential damage, including injury to any person, caused by items of our manufacture or sale. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply.) In any event, BALDOR's total liability, under all circumstances, shall not exceed the full purchase price of the control. Claims for purchase price refunds, repairs, or replacements must be referred to BALDOR with all pertinent data as to the defect, the date purchased, the task performed by the control, and the problem encountered. No liability is assumed for expendable items such as fuses.

Goods may be returned only with written notification including a BALDOR Return Authorization Number and any return shipments must be prepaid.



Baldor Electric Company
P.O. Box 2400, Ft. Smith, AR 72902-2400
(479) 646-4711
Fax (479) 648-5792